

## **Western Instruments**


Established 1965

## Inspection of Lattice Structures

Wrong Foot/Leg Placement

20° Member Angle

Field Induction Point

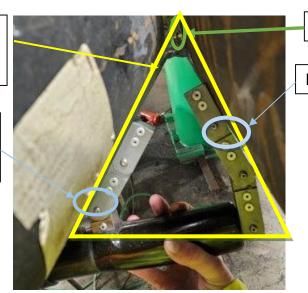

Weld

Field Induction Point

Correct Foot/Leg Placement

