



SYSTEM SET UP ▶



A Connect White and UV light guides to their respective light sources.
CAUTION: Light guide ends are fragile, handle with care.



B Connect remote focus cable and camera cable to control unit.
CAUTION: Camera connector is fragile, orient tab to 6 o'clock position and connect gently



C Connect A/C Power Cords, DC Jacks & DVI Video cable into the back of the Control Unit.



D Switch Main Power on back of Control Unit to ON. Separately switch White and UV light source to ON. Power & Light Controls on Front of each unit


CHANGING OPTICAL TIPS ▶



E Select appropriate optical adapter: 0, 45, 60, or 90 (narrow or wide FOV) degree DOV tips.



F Unthread stainless steel locking ring where the optical adapter attaches to the PoleCam HD. Gently pull tip straight back until tip comes off.

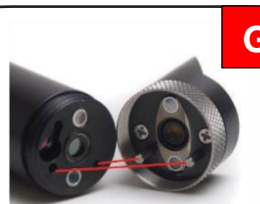

G Take selected optical adapter and line up pins and white marks.



H Gently push tip straight forward until it stops. Thread stainless steel locking ring until new optical adapter is secure.

CAUTION: AVOID EYE AND SKIN EXPOSURE TO UVA LIGHT





ADJUSTMENTS ▶



1. Focus
2. Shutter
3. Mirror
4. Flip
5. Preset (2ea.)
6. Lens Correction



QN HD Camera Adjustments:

1. Menu UP/DOWN
2. Menu INCREASE/DECREASE
3. SELECT
4. Image Capture



UV/White On/Off & Light Intensity
Decrease intensity to off by rotating knob CCW. Increase intensity to max by rotating knob CW.

SeeUV™ PoleCam HD 1000 SYSTEM CONNECTIONS ▶

